


**VIDEO COPY PROCESSOR**

MODEL


**P93W**

**P93E**

**OPERATION MANUAL**

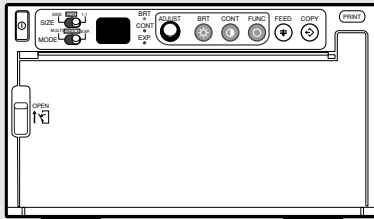

THIS OPERATION MANUAL IS IMPORTANT  
TO YOU.  
PLEASE READ IT BEFORE USING YOUR  
VIDEO COPY PROCESSOR.

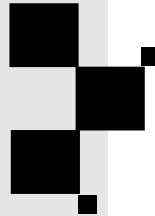

# VIDEO COPY PROCESSOR

This video copy processor complies with the requirements of the EC Directive 89/336/EEC, 73/23/EEC, 93/42/EEC and 93/68/EEC.

The electro-magnetic susceptibility has been chosen at a level that gains proper operation in residential areas, on business and light industrial premises and on small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

## **WARNING:**

In the USA or Canada, use the AC power cord according to the recommendations as below, in order to comply with UL2601-1 and CAN/CSA C22.2 No. 601.1.

- Case 1. Connect to the 120V receptacle of the room or the host equipment.  
The AC power cord should be UL or CSA approved and consist of type SJT, size 16 or 18AWG, length 2.5m or shorter cord with IEC320/C13 type, 125V 10A or higher rating connector and NEMA 5-15 type, 125V 10A or higher rating, Hospital Grade plug.
- Case 2. Connect to the 230V receptacle of the room or the host equipment.  
The AC power cord should be UL or CSA approved and consist of type SJT, size 16 or 18AWG, length 2.5m or shorter cord with IEC320/C13 type, 250V 10A or higher rating connector and NEMA 6-15 type, 250V 10A or higher rating, Hospital Grade plug.
- Case 3. Connect to the 120V receptacle of the host equipment.  
The AC power cord should be UL or CSA approved and consist of type SJT, size 16 or 18AWG, length 2.5m or shorter cord with IEC320/C13 type, 125V 10A or higher rating connector and IEC320-2.2/E type, 125V 10A or higher rating plug.
- Case 4. Connect to the 230V receptacle of the host equipment.  
The AC power cord should be UL or CSA approved and consist of type SJT, size 16 or 18AWG, length 2.5m or shorter cord with IEC320/C13 type, 250V 10A or higher rating connector and IEC320-2.2/E type, 250V 10A or higher rating plug.

## **NOTE:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his or her own expense.

## **Information:**

This class A digital apparatus complies with Canadian ICES-003.

"CLASSIFIED BY UNDERWRITERS LABORATORIES INC.®  
WITH RESPECT TO ELECTRIC SHOCK, FIRE AND MECHANICAL HAZARDS ONLY IN ACCORDANCE WITH UL2601-1 AND CAN/CSA C22.2 No. 601.1"

# CAUTION:



## **RISK OF ELECTRIC SHOCK DO NOT OPEN.**



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK)

NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

When you dispose of the unit or accessories, you must obey the law in the relative area or country and/or regulation in the relative hospital.

## **WARNING:**

Install and use this appliance in accordance with the operation manual for safety and EMC (Electromagnetic Compatibility). If it is not installed and used in accordance with the operation manual, it may cause interference to other equipment and/or other risk.

To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

This appliance must be earthed.

In Europe, use the AC power cord according to the recommendations as below, in order to comply with EN60601-1 and EN60950.

Connect to the 230V receptacle of the room or the host equipment.

The AC power cord should be VDE approved and consist of core size 1 mm<sup>2</sup> or bigger, length 2.5m or shorter cord with IEC320/C13 type, 250V 10A or higher rating connector and CEE(7)VII type or IEC 320-2.2/E type, 250V 10A or higher rating plug.

Use the video cable and/or the wired remote control according to the recommendations as below, in order to comply with safety and EMC standards.

The video cable shall be 2m long or shorter, 75Ω coaxial, 3C-2VT or equivalent, with BNC plug at each end.

The wired remote control shall be Mitsubishi Electric parts No. 939P951010. (2m long or shorter, shielded wire, with 3.5mm diameter stereo mini-plug and switch box.)

This product is to be employed with medical equipment, just for reference purpose, not for medical diagnostic purpose.

## **Information:**

This equipment complies with EN55011, class B, group 1.

<b>1</b>	<b>CONTENTS .....</b>	<b>1</b>
<b>2</b>	<b>PRECAUTIONS .....</b>	<b>2 - 4</b>
<b>3</b>	<b>UNPACKING .....</b>	<b>5</b>
<b>4</b>	<b>FEATURES AND FUNCTIONS</b>	
	Front Panel .....	6
	Rear Panel .....	7
<b>5</b>	<b>INSTALLATION OF PAPER .....</b>	<b>8 - 9</b>
<b>6</b>	<b>EXAMPLE OF CONNECTION /SETTING OF SWITCHES</b>	
	Composite Video Signal .....	10
	Medical Video Signal .....	11
<b>7</b>	<b>PRINTING</b>	
	Printing Procedure .....	12
	Use of Remote Control.....	13
<b>8</b>	<b>ADJUSTMENT OF PRINT PICTURE</b>	
	Adjustment of Brightness/Contrast .....	14 - 15
<b>9</b>	<b>SETTING FUNCTION MODE</b>	
	Function mode .....	16
	Setting the function mode .....	17 - 21
	SIZE switch setting.....	22
	MODE switch setting .....	23
	Print patterns depending on the combination of the settings of the SIZE and MODE switches ...	24
	User setting .....	25
	Resetting the set values .....	25
<b>10</b>	<b>ERROR DISPLAY .....</b>	<b>26 - 28</b>
<b>11</b>	<b>DIP SWITCH FUNCTIONS .....</b>	<b>29</b>
<b>12</b>	<b>STATUS AND MODES .....</b>	<b>30</b>
<b>13</b>	<b>USE OF CLEANING PAPER .....</b>	<b>31</b>
<b>14</b>	<b>MAINTENANCE.....</b>	<b>32</b>
<b>15</b>	<b>SPECIFICATIONS .....</b>	<b>33</b>

# 2

## PRECAUTIONS

In the interest of safety, please observe the following precautions:

### POWER REQUIREMENT

This Video Copy Processor is designed for operation on 100-240V AC 50/60Hz. Never connect to any outlet or power supply having a different voltage or frequency.

**WARNING : THIS APPARATUS MUST BE EARTHED.**  
**AVERTISSEMENT : CET APPAREIL DOIT ETRE MIS A LA TERRE.**

This equipment is classified as class I, according to the type of protection against electric shock.

## PROTECTIVE MEASURES

### IF ABNORMALITIES ARISE, . . .

Use of the unit during emission of smoke or abnormal sounds (without adopting countermeasures) is dangerous. In such a case, unplug the power cord from the source outlet immediately, and request maintenance services from the sales dealer.

### NEVER INSERT ANY OBJECT INTO THE UNIT

Foreign objects of any kind inserted into this unit constitute a safety hazard and can cause extensive damage. If any object should be inserted into the unit, unplug the power cord, then contact the sales dealer.

### DO NOT PLACE ANYTHING ON THE UNIT

Heavy objects placed on the unit can cause damage or obstruct proper ventilation.

### PROTECT THE POWER CORD

Damage to the power cord may cause fire or shock hazard. When unplugging, hold by the plug only and remove carefully.

Never put a heavy thing on the power cord. The cord may be damaged causing a fire or electric shock.

### DO NOT PLACE WATER CONTAINERS ON THE UNIT

Do not place flower vases, and other water-holding containers on the unit. If, for some reason, water seeps to the inside of the unit, unplug the power cord from the source outlet, and contact the sales dealer. If used without corrective measures, the unit may be damaged.

### DO NOT REMOVE THE CABINET

Touching internal parts is dangerous or may lead to malfunction. Contact the sales dealer to carry out internal checks and/or adjustments. Before opening the cover to clear a paper jam, etc., be sure to disconnect the power cord plug.

### DO NOT ATTACH A SCREW MORE THAN 6MM LONG ON THE BOTTOM

If a screw more than 6 mm long is attached on the bottom of the printer, it may cause internal damage.

### PROTECT AGAINST DEW FORMATION

In extremely cold regions, if the unit is moved quickly from an extremely cold place to a warmer one, dew is likely to be formed. If dew is formed, printing is not possible.

### OPERATING AMBIENT TEMPERATURE RANGE

The operating ambient temperature range is 5°C-40°C (41°F-104°F), and humidity of 20-80%.

### BE CAREFUL AROUND PRINT PAPER EXIT SLOT

Do not insert your hand or any material into the paper exit slot during printing.

Do not touch the cutter blade inside the paper exit slot. Otherwise, your finger will be injured.

### DO NOT TOUCH THE THERMAL HEAD AND CUTTER

Do not touch the thermal head (located inside the unit) and the cutter blade.

The thermal head is heated to high temperature. This may cause injury.

## INSTALLATION LOCATIONS

### MAINTAIN GOOD VENTILATION

Ventilation slots and holes are provided on sides of this unit.

Place the unit on a hard and level surface and locate at least 4" (10cm) from walls to ensure proper ventilation.

### UNSUITABLE LOCATIONS

Avoid shaky places or hot-springs areas where hydrogen sulfide and acidic ions are likely to be generated.

### PLACES WITH HIGH HUMIDITY AND DUST

Do not place the unit at locations with high humidity and/or dust. They can cause extensive damage.

Avoid places where the unit is likely to contact oily fumes and vapors.

### PLACES LIKELY TO BE EXTREMELY HOT

Places exposed to direct sunlight, or near heating appliances can attain extremely high temperatures, which may deform the cabinet, or can become a prime cause of damage.

### SET THE UNIT ON A FLAT PLACE

Do not use the unit when inclined  $\pm 20^\circ$  in vertical or horizontal direction, or in an unstable place.

It will disturb paper feeding or ventilation, or affects the set.

---

## FOR LONG OPERATING LIFE

---

### UNSUITABLE MATERIALS FOR THE UNIT

Many plastic components are used in the unit.

Coat flaking and deformation are likely to occur if the unit is wiped with chemical dusters, benzine, thinner or any other solvent, if rubber or PVC items are left in contact with the unit for extended duration, or if the unit is sprayed with insecticide.

### CARE OF THE CABINET

Unplug and clean with a soft cloth slightly moistened with a mild soap and water solution. Allow to dry completely before operating. Never use petroleum base solutions or abrasive cleaners.

### HEAD ABRASION

The thermal head, like the video head, wears out.

When it is abraded, it becomes hard to print out fine details of the picture. In such a case, it is necessary to replace the thermal head. Consult with the sales dealer for replacing the head.

### WHEN A DEFECT IS FOUND

If you detect smoke or other smell from the unit, disconnect immediately the power cord plug from a wall socket and ask the agent for repair. It may dangerous to operate the unit under these conditions.

### CONNECTION DEVICES

Read thoroughly "Operating Precautions" of the instruction booklets for the devices connected with the Video Copy Processor.

Do not disconnect the power cord during printing.

### CAUTION ON RELOCATING

When transporting this unit, make sure it is not likely to be subjected to impacts. They can be a prime cause for damage. Further, make sure to disconnect the power cord from the power outlet, and the cables from the connected devices.

### UNPLUG THE POWER CORD DURING A LONG ABSENCE

Turn off the MAIN power switch and unplug the power cord during a long absence.

---

## THERMAL PAPER

---

- Thermal papers listed in the page of SPECIFICATIONS are available.
- When the remaining length of the paper is about 10" (25cm), a color belt appears at the paper end. Prepare for replacement of the paper. If the remaining paper length is less than 10" (25cm), printing becomes uneven due to the uneven paper core surface.
- When the Printed paper is touched by wet hand, the print may be discolored.
- When the paper runs out during printing, the printing operation stops and "EP" is displayed by the indicator on the front panel. Install new paper at this time.
- Store the printed paper in a place with low humidity free from a direct sunlight.
- If the paper absorbs non-volatile organic solvents (alcohol, ester, katone, etc.) the print may be discolored.  
Particularly, if the paper comes in contact with soft vinyl chloride such as a transparent tape, it quickens discoloration.
- Do not use paper other than the specified one.
- Immediately after the paper is replaced, 2-3 images may be printed with a blank part due to hand's dust or oil.
- Avoid direct sunlight or places near heaters, etc., and store the paper in a place with 30°C ( 86°F) or lower temperature and 35-80% RH.

- When the paper is rapidly transferred from a cool place to a hot place, a vapor or a dew is generated on the paper surface causing paper jam or degraded printing quality.
- A finger print or dust on the paper surface may degrade the printing quality.

#### Note:

Mitsubishi brand thermal paper is specially treated with an anti-static coating against thermal head damage caused by static-electricity discharge. The use of non-treated paper may cause premature head failure in your product.

---

## **SAFETY TECHNICAL CHECKS**

---

Periods: According to the recommendations of the manufacturer of medical device.

Scope: a) Visual check

Housing, cables, operator controls, readout device ( displays, LED etc.), labels, accessories, instruction manual.

b) Function test

Performance check acc. instruction manual, also unity and applicability of set and accessory test.

c) Electrical check

Safety electrical test of the configuration in accordance with EN60601-1.

“ In the interest of safety, avoid the handling of liquids beside the set.”

---

## **RESPONSIBILITY OF THE MANUFACTURER**

---

The manufacturer, assembler, installer or importer considers himself responsible for the effects on safety, reliability and performance of the EQUIPMENT only if:

- assembly operations, extensions, re-adjustments, modifications or repairs are carried out by persons authorized by him, and
  - the electrical installation of the relevant room complies with the IEC requirements
  - the EQUIPMENT is used in accordance with the instructions for use.
- Any service after expiration of the warranty period will be chargeable. Consult your dealer for advice.

---

## **TECHNICAL DESCRIPTION**

---

The supplier will make available on request such circuit diagrams, component part lists, descriptions, calibration instructions or other information which will assist the USER's appropriately qualified technical personnel to repair those parts of the EQUIPMENT which are classified by the manufacturer as repairable.

The use of ACCESSORY equipment not complying with the equivalent safety requirements of this equipment may lead to a reduced level of safety of the resulting system. Consideration relating to the choice shall include:

- use of the accessory in the PATIENT VICINITY
- evidence that the safety certification of the ACCESSORY has been performed in accordance to the appropriate EN60601-1 and/or EN60601-1-1 harmonized national standard.

The transportation and storage environmental conditions are:





Temperature : -20°C - +60°C (-4°F - +140°F)

Humidity : 90%RH or less at 40°C (104°F)


Note : The above transportation environmental conditions indicate the storage environmental conditions during transport.

# 3 UNPACKING

Take the unit out of the box by the following procedures. Make sure to check the contents.
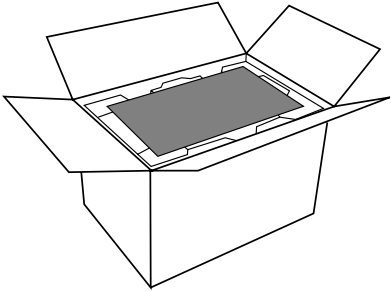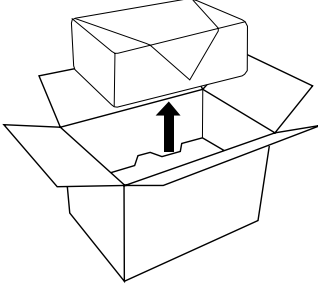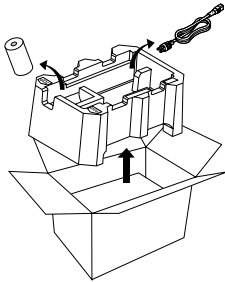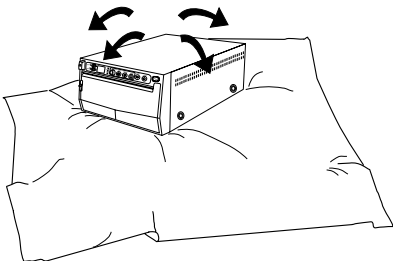
<b>1</b> Open the top of the box.	<b>3</b> Take the unit out of the box carefully.
	 <ul style="list-style-type: none"><li>• Make sure to keep the unit horizontal.</li></ul>
<b>2</b> Remove the cushion above the unit.	<b>4</b> Unwrap the unit.
	

## Accessories

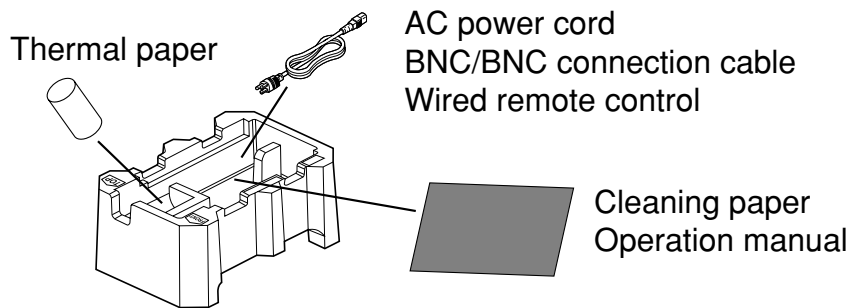




# 4


# FEATURES AND FUNCTIONS

## Front Panel

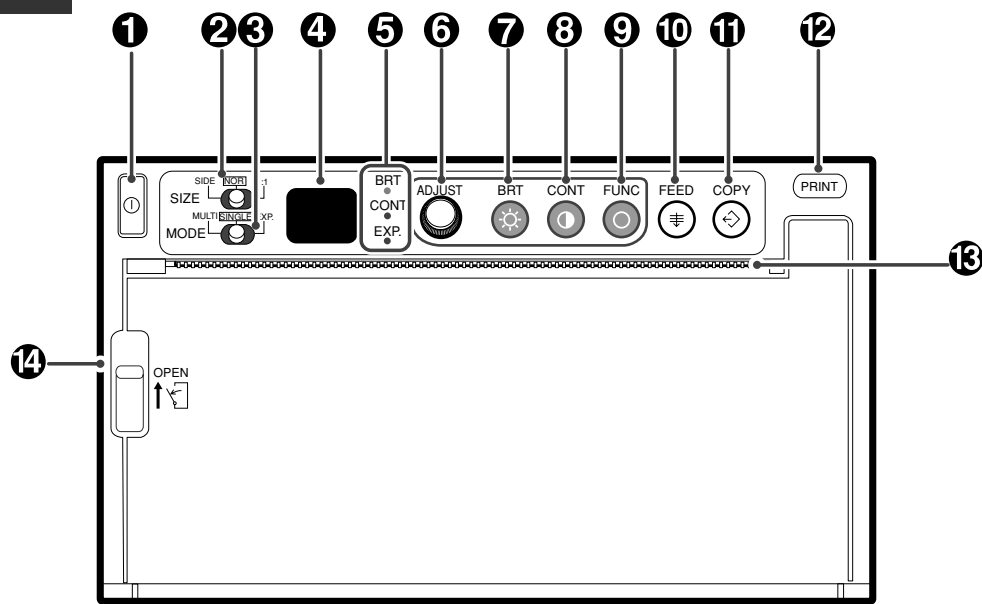

	Name	Function	Reference Page
❶	Power switch	Turns on/off the power.	12 • 31
❷	SIZE switch	Selects the size of images to print.	22
❸	MODE switch	Selects the extended function of the SIZE switch.	23
❹	Indicator	Displays stand-by, functions and error messages.	13•15•17-20•24-28•30
❺	Indicator (BRT/CONT/EXP.)	Displays the function being set.	14 • 23
❻	ADJUST control	Turn to change the settings of each function.	15
❼	BRT (brightness) button	Sets the brightness of the print image.	14
❽	CONT (contrast) button	Sets the contrast of the print image.	14
❾	FUNC (function) button	Selects the function mode.	16
❿	FEED button	Press to feed the paper.	12
⓫	COPY button	Press to print additional copies of the previous print-out.	12
⓬	PRINT button	Press to print the image.	12
⓭	Print exit/Cutter	Printed paper will come out through this slot./ Cut the printed paper here.	12
⓮	Lever	Switch to open the door.	8

# Rear Panel

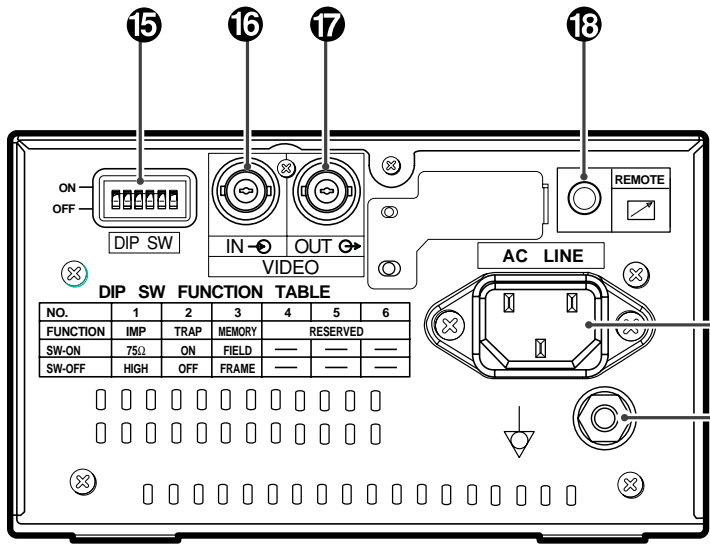

## 20 POTENTIAL EQUALIZATION TERMINAL

This is used to equalize the potential of the equipment connected to this unit. For details refer to the installation instruction of equipment to be connected.

	Name	Function	Reference Page
15	DIP switch	Selects special functions.	10•11•29
16	VIDEO IN connector (BNC type)	Video signal input.	10•11
17	VIDEO OUT connector (BNC type)	Video signal output (Monitor output).	10•11
18	Remote control terminal	Terminal to connect the remote control.	13
19	Power terminal (AC LINE)	Connect the power cord to this terminal.	10•11
20	Potential equalization terminal	Makes the connected equipment potential equal.	—


# 5

## INSTALLATION OF PAPER

### Paper (High-density paper KP65HM-CE)


- Moisture, fingerprints or dust on the paper surface may cause a noise at printing or deterioration in print quality. Set the paper by the following procedure to prevent adhesion of fingerprint or dust on the paper surface.

#### 1 Open the door.

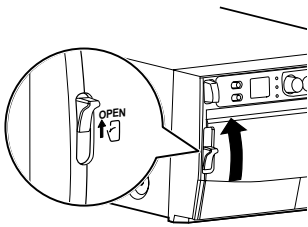


- Switch the lever located on the left side to the "OPEN" position.
- The door opens.


#### 2 Load the paper roll.

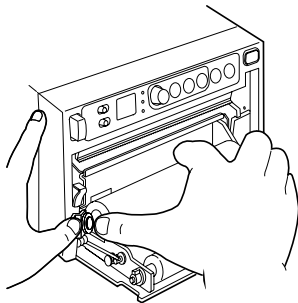

- Place the paper roll in the printer.

 

INCORRECT

 


CORRECT

printing side


Note: The printing surface is the outside. Place the paper with the thermo-sensitive side (printing side) up. When the paper roll is placed inversely, images can not be printed.

#### 3 Pull out the paper end.

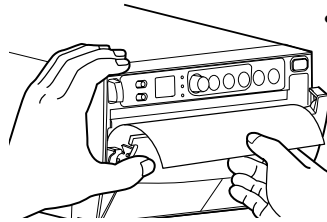


- Pull out the first 15-20cm (6 in. - 9 in.) of the paper to remove any slack in the roll.

#### 4 Close the door.

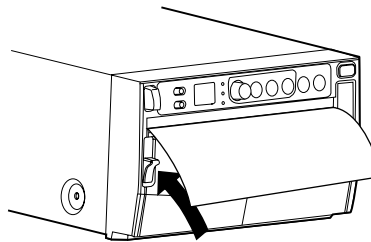


#### 5 Cut the paper end.

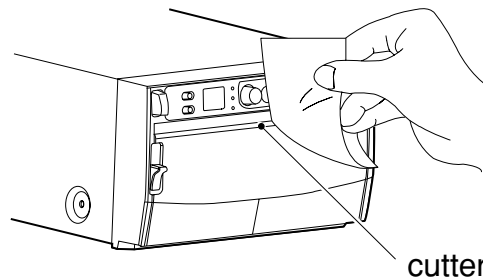



cutter

- Cut the paper end with the cutter by pulling the paper upwards against the cutter blade.




■ When setting the paper, observe the following precautions to prevent paper jam.
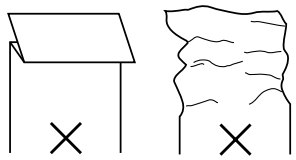
<b>Do not use defective paper.</b>	
	<ul style="list-style-type: none"> <li>■ Do not use bent or wrinkled paper.</li> </ul>
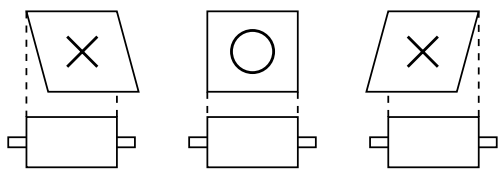
<b>Adjust the paper position correctly.</b>	
	<ul style="list-style-type: none"> <li>■ When the paper is fed out skewed from the print exit, adjust the paper position so that it is fed out straight.</li> </ul>
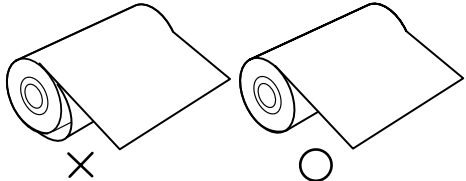
<b>Do not allow slack in the paper roll.</b>	
	<ul style="list-style-type: none"> <li>■ Set the paper tightly to remove any slack.</li> </ul>

   If the side of the print paper is uneven or the core is sticking out, the amount of paper feeding after printing may vary.  
 When the side of paper is uneven or the core is sticking out, install the print paper after making the paper side even.

The core is sticking out.	The paper is uneven.	Make the paper side even.
		
<b>INCORRECT</b>		<b>CORRECT</b>

<b>CAUTION</b>
<ul style="list-style-type: none"> <li>• Keep the high-density paper away from fingerprint, dust or moisture when storing it.</li> <li>• Do not touch the rubber roller. Do not stain or damage the roller surface.</li> <li>• Do not touch the thermal head (located behind the cutter). When printing, the thermal head is heated to high temperature.</li> <li>• Do not touch the cutter blade.</li> </ul>

# 6

## EXAMPLE OF CONNECTION / SETTING OF SWITCHES

 

Connecting to various composite video signal equipment such as medical equipment.

### Composite Video Signal


- ① Turn off the power switches of the Video copy processor and the equipment to be connected.
- ② Connect the VIDEO input terminal of the Video copy processor to the video output terminal of the connected equipment.

Video signal equipment


Television

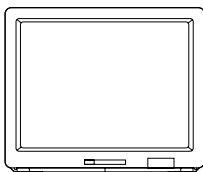

VCR

 

Video disc player

 


Camera-type VCR

To VIDEO  
output  
terminal

To VIDEO  
IN  
terminal


Rear panel

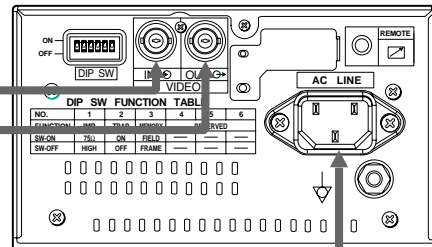

To VIDEO  
OUT  
terminal

To VIDEO  
input  
terminal


Connect  
Power cord

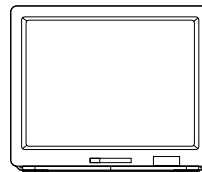

Monitor


### Setting of Switches

- The following is an example of DIP switch setting.
- Refer to page 29 for the DIP switch settings.

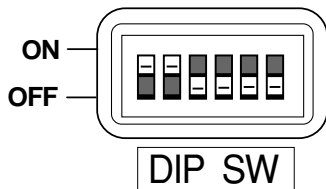


SW-NO.	Setting
1	75Ω
2	ON
3	FRAME
4	OFF
5	OFF
6	OFF


# Medical Video Signal

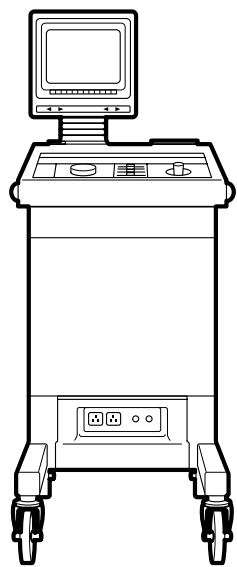

- ① Turn off the power switches of the Video copy processor and the equipment to be connected.
- ② Connect the VIDEO input terminal of the Video copy processor to the video output terminal of the connected equipment.

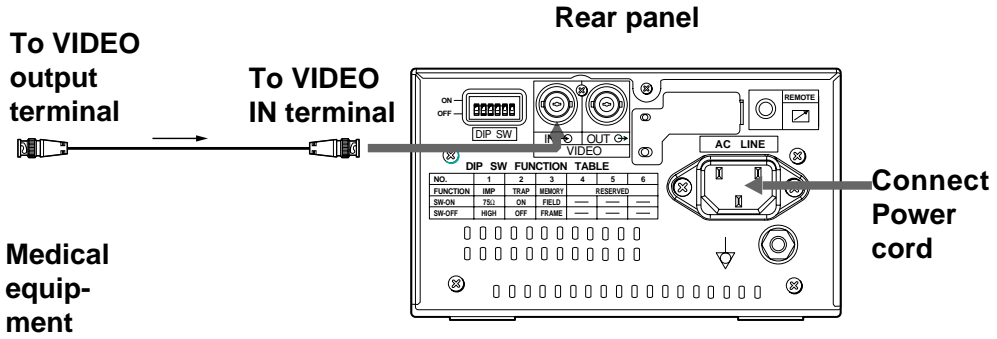

## Setting of Switches

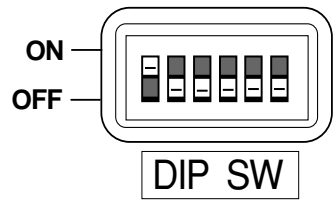

Set the DIP switch as follows:  
(This is standard setting.)

SW-NO.	Setting
1	75Ω
2	OFF
3	FRAME
4	OFF
5	OFF
6	OFF

**DIP SW FUNCTION TABLE**

NO.	1	2	3	4	5	6
FUNCTION	IMP	TRAP	MEMORY	RESERVED		
SW-ON	75Ω	ON	FIELD	—	—	—
SW-OFF	HIGH	OFF	FRAME	—	—	—


- Select  $\gamma$ -curve "3" - "5" for ultrasonic diagnosis equipment.  
Especially "5" is recommended. Refer to the  $\gamma$ -curve set mode on page 17.
- Refer to the " **DIP SWITCH FUNCTIONS** " on page 29 .

# 7

# PRINTING


## Printing Procedure

### 1 Turn on the power.

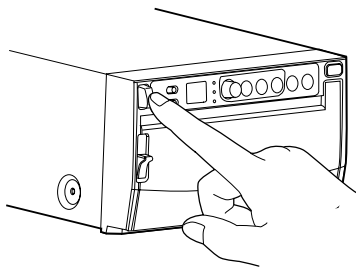



- Press the **“POWER”** switch to turn on the power.

### 3 Cut the printed paper.

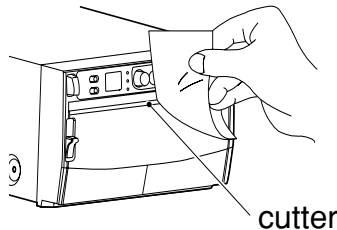

- Cut the printed paper with the cutter by tearing off the paper in the upper right direction.

### 2 Print a picture displayed on the screen.

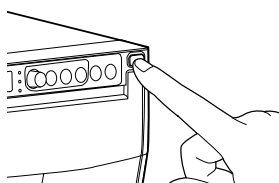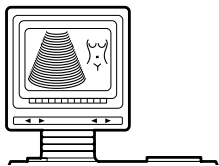


- Display a picture to be printed on the monitor screen, and press the **PRINT** button.
  - When printing finishes, a buzzer tone will be heard.

## Copy Printing

- You can set the number of copies by pressing the **COPY** button on the front panel.

You can copy the same picture as many times as you desire by pressing the **COPY** button.

When pressing the **FEED** button during copy printing, the copy printing is canceled upon completion of the current copy.

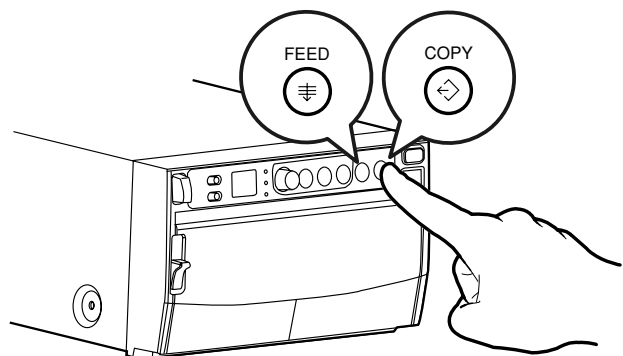


## Paper Feeding

- To feed the paper, hold down the **FEED** button on the front panel.

## Use of Remote Control

- Connect the wired remote control to the remote control terminal on the rear panel.
- Press the button on the remote control to print pictures.  
This button functions the same as the **PRINT** button.
- When no signal is input, the button is invalid.

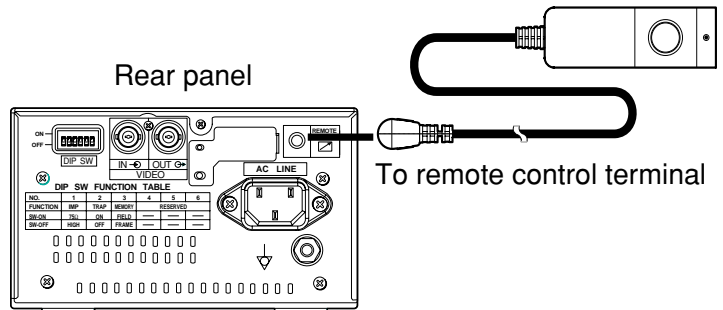

## Precautions on Printing

- When dark pictures are printed consecutively, the Video Copy Processor may become overheated and the indicator blinks.  
In this case, wait for a while until the unit is cooled down.
- Avoid pulling out or holding the paper during printing or copying to prevent paper jam.  
Do not touch the paper until printing or copying finishes.
- When printing is carried out with no signal input, "NO SIGNAL" will be printed at the bottom of the print.

## Paper saving mode

- When the paper saving mode (SAVING :  $\bar{P}$ ) is selected to "!" by **FUNC** button, the amount of paper fed is smaller than in normal paper feeding.  
Press and hold the **FEED** button on the front panel to feed the paper to cut the paper at the appropriate position.




# 8




# ADJUSTMENT OF PRINT PICTURE

## Adjustment of Brightness/Contrast


- You can adjust brightness and contrast of the printed picture while observing the monitor screen.

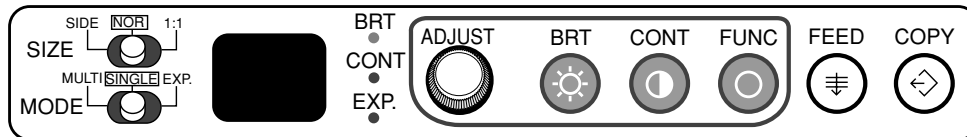
## Control panel





- For adjustment, use the BRT button "", CONT button "", and ADJUST control "".

### 1 Press the buttons to adjust brightness or contrast.

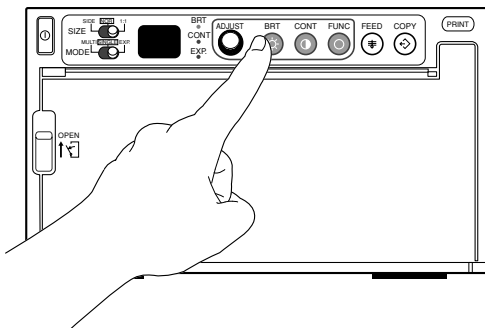


- Press the BRT button " to adjust the brightness.
- The BRT indicator lights up.

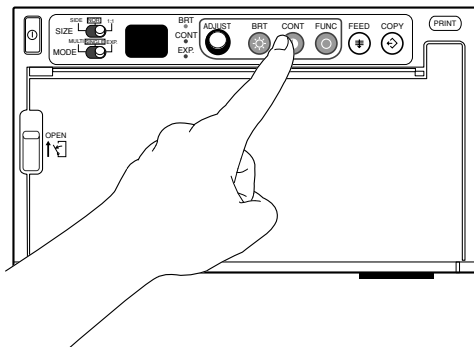


- Press the CONT button " to adjust the contrast.
- The CONT indicator lights up.

## 2 Change the setting.

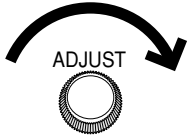


- Turn the control clockwise to increase the value.

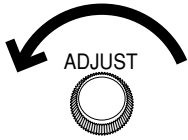

- Turn the control counterclockwise to decrease the value.

- The setting value is displayed by the indicator.

 (example)



- Setting range is -19 to +19.

## 3 Store the set value.



- By pressing the **PRINT** button, the setting value is memorized.
- The memorized value will not be lost even when the power is turned off.

# 9

# SETTING FUNCTION MODE

## Function mode

■ In this mode, the initial setting value of each function can be changed. Each time the FUNC button is pressed, the mode is switched as follows.

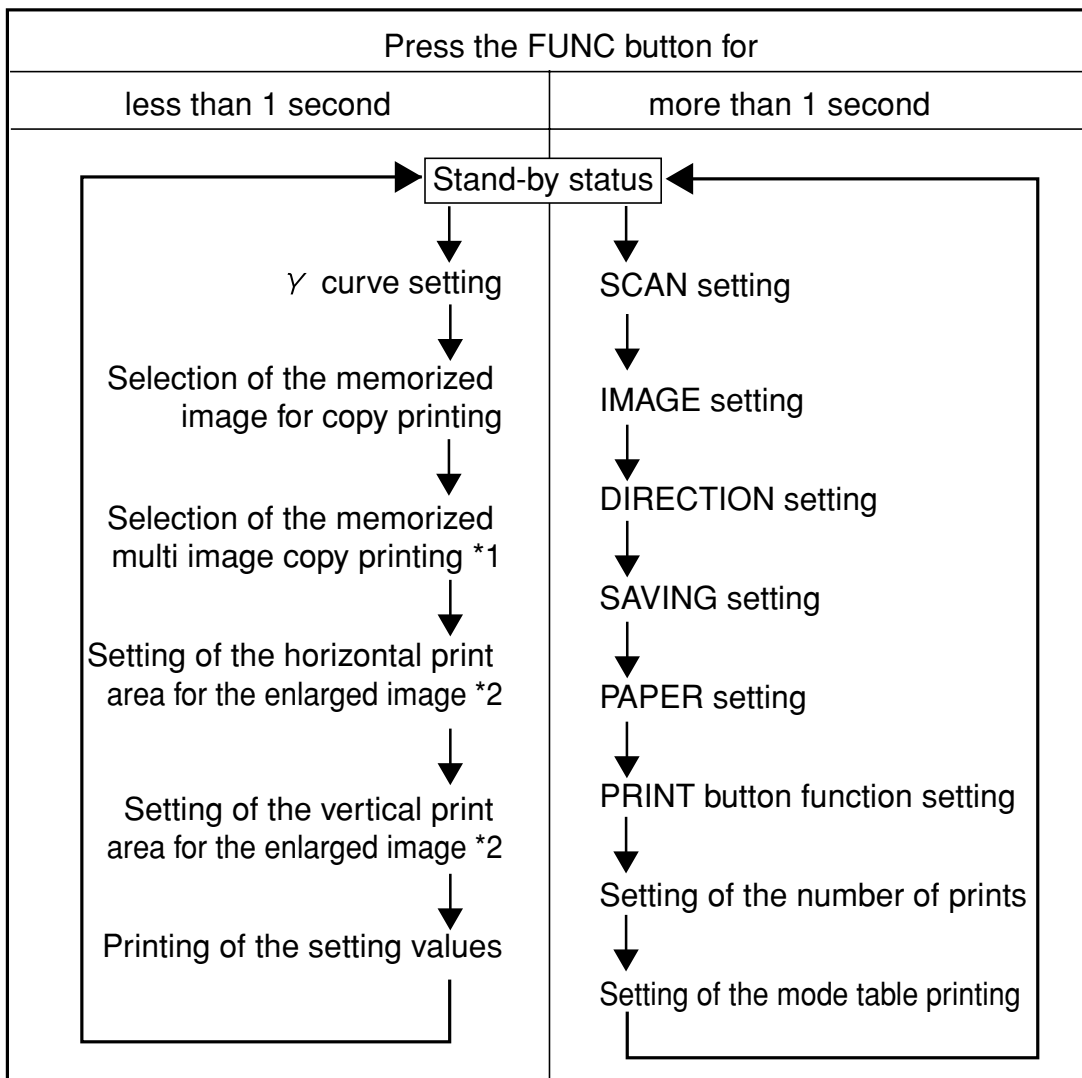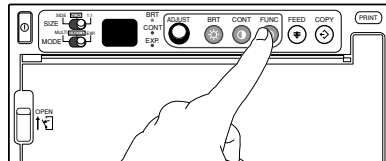


\*1 Displayed only when the MODE switch is set to MULTI.

\*2 Displayed only when the enlarging print is set.

## Setting the function mode

- By turning the ADJUST control, you can change the setting value of each function mode. The set values will not be lost even when the power is turned off.

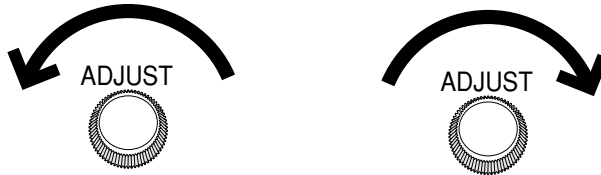


### $\gamma$ curve setting

Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>To select the gamma (<math>\gamma</math>) curve (relation between the density and the brightness of the image) to obtain an optimum density depending on the connected device. Five options are available.</li> <li>The default setting is 5.</li> </ul>


### Selection of the memorized image for copy printing or the first image for the multi image copy printing

Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select any image from the last 10 printed images to print it again.</li> <li>The larger the number displayed by the indicator becomes, the older the selected image is. (Selectable range : 0 to 9.)</li> <li>The selected image is displayed on the monitor. The image selected in this mode is specified automatically as the first image (the image printed on the right) for 2-multi image copy printing.</li> <li>The selected image is kept until a new image is memorized.</li> <li>The memorized images are cleared when the power is turned off.</li> </ul>


## Selection of the second image for the multi image copy printing

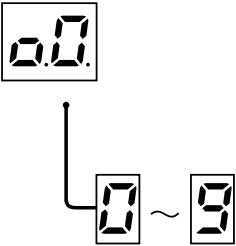Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select any image from the last 10 printed images for 2-multi image printing.</li> <li>The larger the number displayed by the indicator becomes, the older the selected image is. (Selectable range : 0 to 9)</li> <li>The image selected in this mode is printed on the left for 2-multi image copy printing.</li> <li>The selected image is displayed on the monitor.</li> <li>The selected image is kept until a new image is memorized.</li> <li>The memorized images are cleared when the power is turned off.</li> </ul>



 
## Setting of the horizontal print area for the enlarged image

Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can specify the print area when the image is enlarged and printed in NOR size.</li> <li>Because the print area is shown on the monitor, you can adjust the print area viewing the monitor and shift the print area by turning the ADJUST control.</li> <li>You can adjust the print area just horizontally in this mode. If you expand the print area vertically, the whole image is enlarged.</li> </ul>






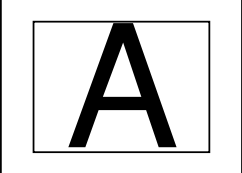

## Setting of the vertical print area for the enlarged image

Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can specify the print area when the image is enlarged and printed in SIDE size.</li> <li>Because the print area is shown on the monitor, you can adjust the print area viewing the monitor and shift the print area by turning the ADJUST control.</li> <li>You can adjust the print area just vertically in this mode. If you expand the print area horizontally, the whole image is enlarged.</li> </ul>

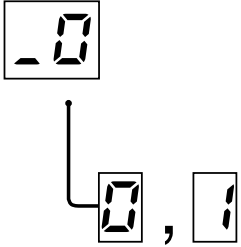




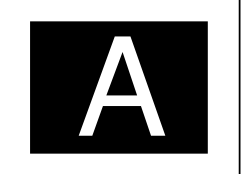
 
## Printing of the setting values

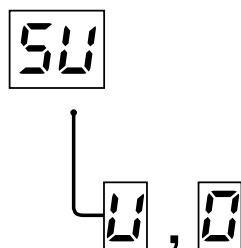Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can include the setting values of BRT, CONT and GAMMA in the print at the bottom.</li> <li> : The setting values are not printed.</li> <li> : The setting values are printed.</li> </ul>



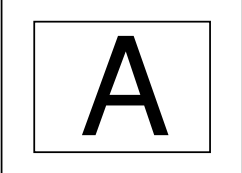
## SCAN setting

Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select underscan or overscan of the print image.</li> <li> : Underscan</li> <li> : Overscan</li> </ul> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p> (Underscan)</p> </div> <div style="text-align: center;">  <p> (Overscan)</p> </div> </div>



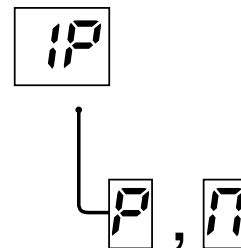
## IMAGE setting

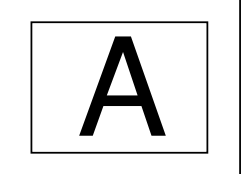Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select the print pattern, positive print or negative.</li> <li> : Positive print</li> <li> : Negative print</li> <li>When positive printing is selected, the image is printed as displayed. When negative printing is selected, the image is printed inversed.</li> </ul> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p> (Positive print)</p> </div> <div style="text-align: center;">  <p> (Negative print)</p> </div> </div>


## DIRECTION setting

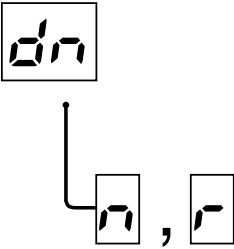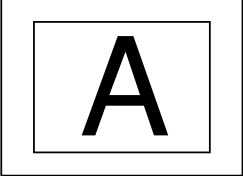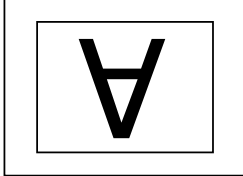Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select the print direction.</li> <li><b>n</b> : Printing starts from the bottom of the image. (The image is rotated 180°)</li> <li><b>r</b> : Printing starts from the top of the image.</li> </ul> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p><b>n</b> (Normal)</p> </div> <div style="text-align: center;">  <p><b>r</b> (Reverse)</p> </div> </div>


## SAVING setting

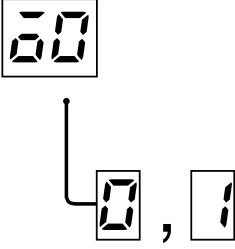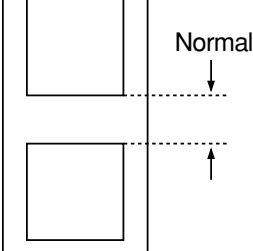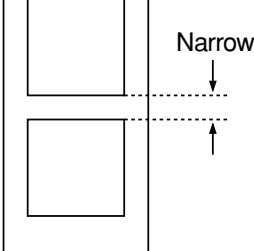Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select the amount of paper for preparing a margin of the next print.</li> <li><b>0</b> : Normal margin</li> <li><b>1</b> : Narrow margin</li> </ul> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;">  <p><b>0</b> (Normal margin)</p> </div> <div style="text-align: center;">  <p><b>1</b> (Narrow margin)</p> </div> </div>


## PAPER setting

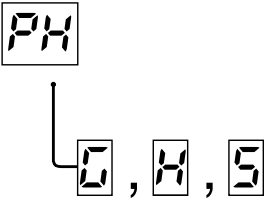Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select any of the following options according to the paper to be used.</li> <li><b>0</b> : High glossy paper (KP91HG-CE)</li> <li><b>H</b> : High density paper (KP65HM-CE, KP65H-CE)</li> <li><b>S</b> : Standard paper (KP61B-CE, KP61S-CE)</li> </ul>


## PRINT button function setting

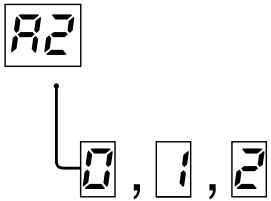Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can extend the function of the <b>PRINT</b> button.           <ul style="list-style-type: none"> <li>0 : Normal function only</li> <li>1 : The image is copied as many times as the <b>PRINT</b> button is pressed.</li> <li>2 : The printed images are memorized during printing.</li> </ul> </li> </ul>

## Setting of the number of prints

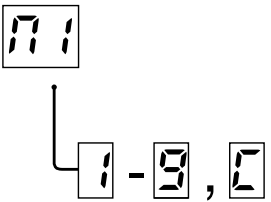Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can select the number of prints when you press the <b>PRINT</b> button.</li> <li>The selectable number is 1 to 9 and 0 (continuous printing).</li> <li>The continuous printing can be canceled by pressing the <b>FEED</b> button.</li> </ul>


## Setting of the mode table printing

Indicator	Purpose and description
	<ul style="list-style-type: none"> <li>You can print the table of LED indications and the explanations corresponding to each function mode.</li> <li>You can print the table by pressing the <b>COPY</b> button while <b>HP</b> is displayed on the LED.</li> </ul>




## SIZE switch setting

- The size of the printed image can be selected by the SIZE switch.

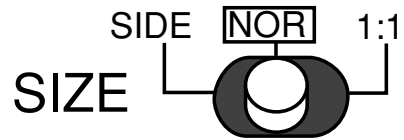


Example


SIDE

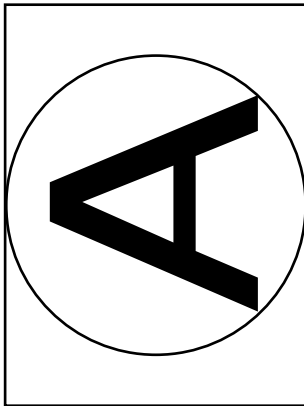

NOR.

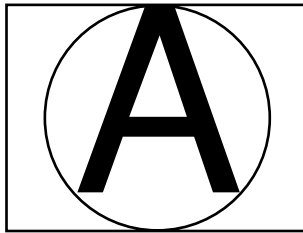


1:1

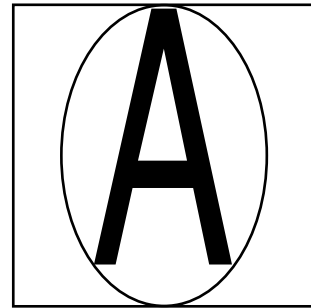

## MODE switch setting

■ MODE switch works as the extended function of SIZE switch.

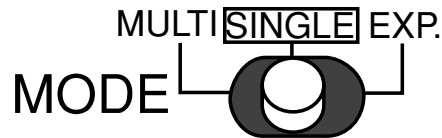

Set this switch to SINGLE for normal use. The image is printed in the size specified by the SIZE switch.






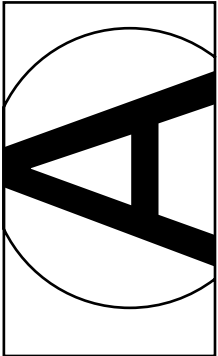
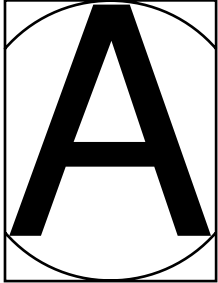
When selecting MULTI, you can print 2-multi images.

- To print a multi image, press the **PRINT** button twice.
- At the first press of the **PRINT** button, the first image is memorized and the indicator displays  $\frac{1}{2}$ .
- At the second press of the **PRINT** button, the second image is memorized and both the first and the second images are printed automatically.
- When 1:1 is selected by SIZE switch, multi image printing is not available.

When selecting EXP., you can enlarge or reduce the image to be printed in the NOR. size or the SIDE size according to the setting of the SIZE switch.

- When EXP. is selected, the EXP. indicator lights up and the enlargement ratio is displayed.
- The switch does not stay at the EXP. position. When you release the switch at the EXP. position, it returns to the SINGLE position automatically.
- The enlargement ratio can be set from 0.5 to 2.0 by 0.1 steps.
- Use the ADJUST control to change the enlargement ratio.
- The fixed enlargement ratio will not be lost even when the power is turned off.
- When 1:1 is selected by the SIZE switch, printing of enlarged or reduced images is not available.

**Print patterns depending on the combination of the settings of the SIZE and MODE switches**

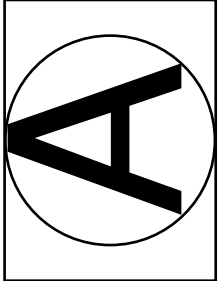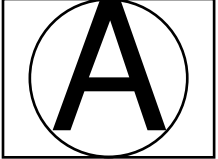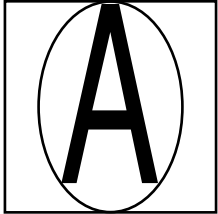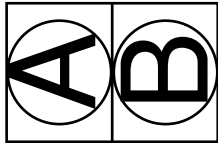SIZE \ MODE	SIDE	NOR	1:1
SINGLE			
MULTI			Printing is not available.
EXP.			Printing is not available.

## User setting

■ This unit can memorize the settings which you adjusted to meet the operating conditions of the connected devices and the print quality conditions as the "user setting". When you change the setting by mistake, you can correct it with a simple operation.

### ■ Memorizing the user setting

1 The service personnel of this unit memorizes the settings. Contact your dealer.

### ■ Setting back to the user setting

1 Turn off the power.

2 While pressing the **COPY** button, turn on the power.

3 The display by the indicator changes from  $U5$  to  $00$ , and the setting values are reset to the user setting.

## Resetting the setting values

■ You can reset the setting values of brightness, contrast and functions.

1 Turn off the power.

2 While pressing the **FUNC** button, turn on the power.


3 The display by the indicator changes from  $F1$  to  $00$ , and the setting values are reset to the default setting.


The user setting values are not reset with this operation.


# 10 ERROR DISPLAY


In case of an error in the unit during operation, you are warned by an alarm tone or the LED indicator.

Cause/Error display	Symptom/Remedy
<p>① <b>Overheat</b></p>	<p>[Symptom]</p> <ul style="list-style-type: none"> <li>When the head gets overheated, the indicator blinks. In this case, the following buttons function as described below. When overheat occurs during continuous printing, printing starts as soon as the error is solved.</li> </ul> <p><b>COPY</b> button</p> <ul style="list-style-type: none"> <li>Each time the <b>COPY</b> button is pressed, the number displayed by the indicator increases as [2]→[3]→[4].</li> <li>After the error is solved, copy printing starts automatically.</li> </ul> <p><b>PRINT</b> button</p> <p>When the function of the <b>PRINT</b> button has been set so that the image is copied as many times as the <b>PRINT</b> button is pressed:</p> <ul style="list-style-type: none"> <li>Each time the <b>PRINT</b> button is pressed, the number displayed by the indicator increases as [2]→[3]→[4].</li> <li>After the error is solved, copy printing starts automatically.</li> </ul> <p>When the function of the <b>PRINT</b> button has been set so that the printed image is memorized during printing:</p> <ul style="list-style-type: none"> <li>When the <b>PRINT</b> button is pressed, the current input image is memorized. You can continue memorizing images until the memory becomes full.</li> <li>After the error is cleared, the memorized images are printed automatically.</li> </ul> <p><b>FEED</b> button</p> <ul style="list-style-type: none"> <li>When the number of copies has been set to more than one, outstanding copies are canceled at a press of the <b>FEED</b> button.</li> </ul> <p>[Remedy] Wait until the head cools down.</p>

Cause/Error display	Symptom/Remedy
<p data-bbox="164 254 347 294">② No paper</p> 	<p data-bbox="459 254 613 289">[Symptom]</p> <ul data-bbox="459 296 1382 516" style="list-style-type: none"> <li>• When the paper runs out or the paper is not installed, printing becomes impossible and an alarm tone is heard. In this case, all the buttons become invalid.</li> <li>• If this error occurs while more than one copy is being printed or there are images waiting to be processed, printing is cancelled at the occurrence of the error.</li> </ul> <p data-bbox="459 558 597 594">[Remedy]</p> <p data-bbox="459 600 1338 667">Install a new roll of paper according to "<b>5. INSTALLATION OF PAPER</b>" on page 8.</p> <p data-bbox="459 674 1409 821">When the paper is correctly installed while the printing of more than one copy has been suspended or there are images waiting to be processed, an alarm tone is heard. Then, the paper is fed automatically about 15 cm and printing resumes.</p> <p data-bbox="459 827 1390 894">After the error is resolved, the unit resumes printing from the interrupted image and finishes printing all the outstanding images.</p>


Cause/Error display	Symptom/Remedy
<p data-bbox="164 1062 399 1129">③ Button input error</p> 	<p data-bbox="459 1062 613 1098">[Symptom]</p> <ul data-bbox="459 1104 1373 1360" style="list-style-type: none"> <li>• The button becomes invalid and an alarm tone is heard in the following cases. <ul data-bbox="513 1178 1373 1360" style="list-style-type: none"> <li>• The <b>PRINT</b> button is pressed with the memory full when the <b>PRINT</b> button has been set so that the printed image is memorized during printing.</li> <li>• The <b>PRINT</b> button on the remote control is pressed with no signal input.</li> </ul> </li> </ul> <p data-bbox="459 1367 1403 1434">The indicator displays "Eb" for one second and return to the status before the error occurred.</p>

Cause/Error display	Symptom/Remedy
<p data-bbox="164 254 363 289">④ Door error</p> 	<p data-bbox="462 254 618 289">[Symptom]</p> <ul data-bbox="462 296 1409 516" style="list-style-type: none"> <li>• When the door opens, an alarm tone is heard. The indicator displays "E0" for one second. In this case, all the buttons become invalid.</li> <li>• If this error occurs while more than one copy is being printed or there are images waiting to be processed, printing is cancelled at the occurrence of the error.</li> </ul> <p data-bbox="462 562 602 598">[Remedy]</p> <p data-bbox="462 604 678 640">Close the door.</p> <p data-bbox="462 646 1393 751">When the door is closed while the printing of more than one copy has been suspended or there are images waiting to be processed, an alarm tone is heard and printing resumes.</p> <p data-bbox="462 758 1386 827">After the error is resolved, the unit resumes printing from the interrupted image and finishes printing all the outstanding images.</p>

Cause/Error display	Symptom/Remedy
<p data-bbox="164 1062 435 1098">⑤ Gear lock error</p> 	<p data-bbox="462 1062 618 1098">[Symptom]</p> <ul data-bbox="462 1104 1430 1398" style="list-style-type: none"> <li>• When the thermal head does not automatically go down at the start of printing or paper feeding, an alarm tone is heard.</li> <li>• When the thermal head does not automatically go up at the end of printing or paper feeding, an alarm tone is heard. The indicator displays "EL" and all the buttons become invalid.</li> <li>• If this error occurs while more than one copy is being printed or there are images waiting to be processed, printing is cancelled at the occurrence of the error.</li> </ul> <p data-bbox="462 1444 602 1480">[Remedy]</p> <p data-bbox="462 1486 1040 1522">Turn the power off. Then turn it on again.</p> <p data-bbox="462 1528 1338 1598">Printing of the interrupted image or all the images saved in the memory that are waiting to be processed is cancelled.</p>

# 11

## DIP SWITCH FUNCTIONS

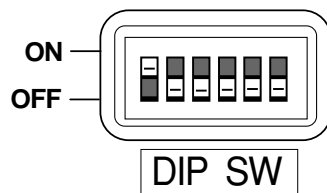

**DIP SW FUNCTION TABLE**

NO.	1	2	3	4	5	6
FUNCTION	IMP	TRAP	MEMORY	RESERVED		
SW-ON	75Ω	ON	FIELD	—	—	—
SW-OFF	HIGH	OFF	FRAME	—	—	—

DIP SWITCH	Functions
① <b>IMP (IMPEDANCE) 75Ω / HIGH</b>	Set to " <b>75Ω</b> " in normal use. Set to " <b>HIGH</b> " when making branch connection of a monitor or other units to the VIDEO IN connector.
② <b>TRAP ON / OFF</b>	Set to " <b>OFF</b> " in normal use. Set to " <b>ON</b> " when inputting a color signal. <b>ON</b> : The trap circuit is active. <b>OFF</b> : The trap circuit is inactive.
③ <b>MEMORY FIELD / FRAME</b>	<b>FRAME</b> : Set to " <b>FRAME</b> " position in normal use. <b>FIELD</b> : Set to " <b>FIELD</b> " position to print an image with rapid motion.  ■ The image displayed on the monitor is usually a single frame consisting of two fields.
④ RESERVED ⑤ RESERVED ⑥ RESERVED	Set to " <b>OFF</b> ". (These switches are not used.)



# 12









# STATUS AND MODES

Set state/Mode	LED display		Contents of right side LED display	Video output
	Left	Right		
Power off			Power off	Through
Stand-by	0	0	Normal stand-by	Through
γ-curve set mode (γ-curve)	r	1 - 5	γ-curve No.	Through
Selection of the memorized image for copy printing	0	0 - 9	Image No. in the memory	Freeze
Selection of the memorized image for multi copy printing	a.	0 - 9	Image No. in the memory	Freeze
Setting of the horizontal print area	H	-	-	Monitor
Setting of the vertical print area	V	-	-	Monitor
Printing of the setting values	-	0 , 1	Printing enabled / disabled	Through
SCAN	S	U , 0	Underscan / Overscan	Through
IMAGE	I	P , N	Positive / negative	Through
DIRECTION	d	n , r	Normal / Reverse	Through
SAVING	ā	0 , 1	Normal / Paper saving	Through
PAPER	P	0 , H , 5	High glossy / High density / Normal	Through
PRINT button function setting	R	0 , 1 , 2	Normal print / Printing as many times as the PRINT button is pressed. / Image memorizing during printing	Through
Setting of the number of prints	n	1-9 , C	Number of prints	Through
Setting of the mode table printing	H	P	Mode table printing	Through
Brightness adjustment		-19-19	Brightness index	Monitor
Contrast adjustment		-19-19	Contrast index	Monitor
Copy status	C	1 - 9	Number of outstanding copies	Through
Error detect state	E	P	No paper	Through
		b	Button input error	
		a	Door is open.	
		L	Gear lock	

# 13

## USE OF CLEANING PAPER

When the thermal head is dirty with dust, etc., white spots or stripes may appear on the print. In this case, clean the thermal head by the following procedure **BY USING THE SUPPLIED CLEANING PAPER**.
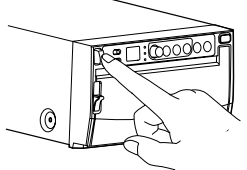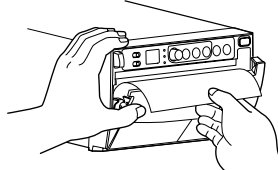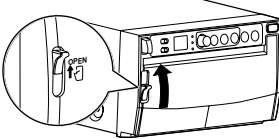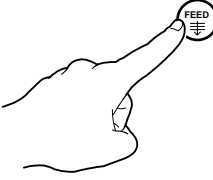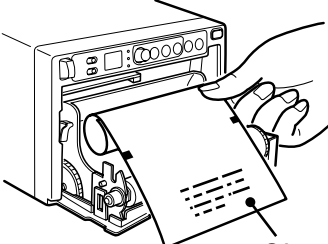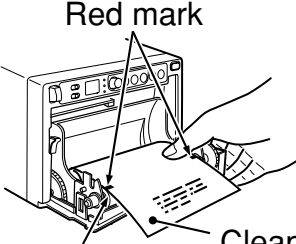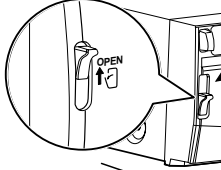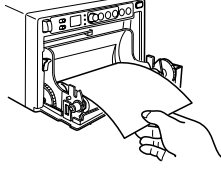
<b>1 Turn on the power.</b>  <ul style="list-style-type: none"><li>■ Press the <b>POWER</b> switch to turn on the power.</li></ul>	<b>4 Close the door.</b>  <ul style="list-style-type: none"><li>■ Close the door without taking out the cleaning paper.</li></ul>
<b>2 Open the door.</b>  <ul style="list-style-type: none"><li>■ Switch the left side lever to the <b>OPEN</b> position.</li></ul>	<b>5 Press the "FEED" button.</b>  <ul style="list-style-type: none"><li>■ Keep pressing the <b>FEED</b> button until you hear a beep.</li></ul>
<b>3 Insert the cleaning paper.</b>  <ul style="list-style-type: none"><li>■ Roll the cleaning paper and install into the set.</li></ul> <p>Cleaning paper</p>  <ul style="list-style-type: none"><li>■ Adjust the red mark on the cleaning paper parallel to the platen roller.</li></ul> <p>Red mark</p> <p>Platen roller</p> <p>Cleaning paper</p>	<b>6 Take out the cleaning paper.</b>  <ul style="list-style-type: none"><li>■ Open the door.</li></ul>  <ul style="list-style-type: none"><li>■ Take out the cleaning paper.</li></ul> <ul style="list-style-type: none"><li>■ Do not pull out the cleaning paper while the door is closed.</li></ul>
<b>7 Repeat the steps 3-6 by 2 or 3 times, and print 1-2 sheets to verify the cleaning effect.</b>	

### CAUTION

- It is recommended that after printing 10 rolls of paper the unit be cleaned using the supplied cleaning paper.
- If the symptom of the dirty head is not corrected even after cleaning, your set needs repairing, contact your dealer.
- Do not pull out the sheet and the cleaning paper while the door is closed. This may cause extensive damage on the unit.
- Never use other cleaning papers. It may cause damage to the thermal head.
- This cleaning paper should be used only for cleaning the thermal head. Do not use it for other purpose.


## Turn off the power for maintenance.

### Maintenance of Main Unit

Wipe off stains of the front panel with a soft cloth.  
When the panel is heavily stained, wipe off with the cloth moistened with neutral cleanser diluted by water and finish with a dry cloth.

### Maintenance of Rubber Roller

When the rubber roller is dirty with dust, etc., a blank spot may appear on the print.  
In this case, eliminate the dust on to the rubber roller with a blower or a brush.

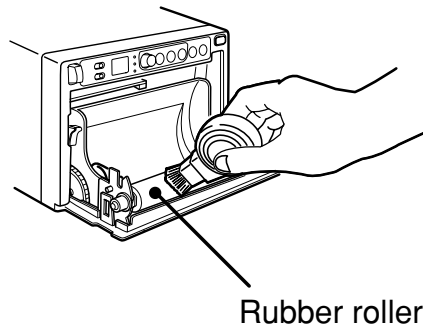

### Cleaning of Thermal Head

When the thermal head is dirty with dust, etc., white spots or stripes may appear on the print.  
In this case, clean the thermal head according to "13. USE OF CLEANING PAPER".

Note: After installation of new roll of paper, dust on the paper will generally require 2 to 3 prints to be made before the dust is eliminated.

# 15


## SPECIFICATIONS

<b>Type:</b>	Video Copy Processor
<b>Model:</b>	P93W / P93E
<b>Power supply and power consumption:</b>	100-240V AC, 50/60Hz, 1.5 - 0.8A
<b>Connection terminal:</b>	Video input terminal (BNC contact plug) Video output terminal (BNC contact plug)
<b>Resolution:</b>	Horizontal 1280 pixels x Vertical 500 lines (Standard) (NTSC) Horizontal 1280 pixels x Vertical 600 lines (Standard) (PAL)
<b>Gradation:</b>	256 gradations
<b>Printing speed:</b>	3.3 sec (Standard) (NTSC), 3.9 sec (Standard) (PAL)
<b>Print size:</b>	4" x 3" (100mm x 75mm) (Standard)
<b>Operating conditions:</b>	Temperature 41 - 104°F (5-40°C) Humidity 20 - 80% RH (No dewing)
<b>External dimensions:</b>	6.1" x 3.5" x 10.1" (154mm x 89.5mm x 256mm); W x H x D
<b>Weight:</b>	6.2 lbs (2.8 kg)
<b>Standard accessories:</b>	BNC/BNC connection cable (2m) ..... 1 piece AC power cord ..... 1 piece Thermal paper KP65HM-CE ..... 1 roll Wired remote control ..... 1 unit Cleaning paper ..... 1 sheet
<b>Optional accessory:</b>	Thermal paper KP65HM-CE, KP65H-CE, KP61S-CE, KP61B-CE, KP91HG-CE

## SERVICE INFORMATION

Before requesting service please review this operation manual to correct minor complaints. If you are unable to correct the problem, consult your MITSUBISHI Dealer or MITSUBISHI Service Department.

DO NOT ADJUST ANY CONTROLS NOT DESCRIBED IN THIS OPERATION MANUAL.  
DO NOT REMOVE THE PROTECTIVE ENCLOSURE OF THIS UNIT.

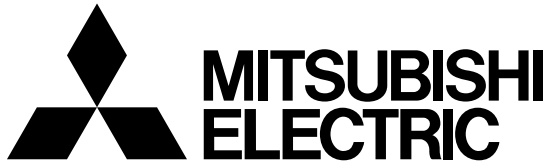

**MITSUBISHI DIGITAL ELECTRONICS AMERICA, INC.**

9351 Jeronimo Road, Irvine, CA 92618  
Phone 949-465-6000

**Mitsubishi Electric Europe B.V.**

**UK Branch**

Travellers Lane, Hatfield, Herts. AL10 8XB, England, U.K.  
Phone (0) 1707 276100 FAX (0) 1707 278755

**German Branch**

Gothaer Strasse 8, 40880 Ratingen ; Postfach 1548, 40835 Ratingen ; Germany  
Phone (2102) 486-9250 FAX (2102) 486-7320

**French Branch**

25, Boulevard des Bouvets - 92741 NANTERRE cedex  
Phone (01) 55.68.55.00 FAX (01) 55.68.57.31

**Italian Branch**

Centro Direzionale Colleoni, Palazzo Perseo-Ingresso 2,  
Via Paracelso 12, 20041 Agrate Brianza, (Milano) Italy  
Phone (039) 60531 FAX (039) 6057694

**Benelux Branch**

Nijverheidsweg 23 A, 3641 RP. Postbus 222, 3640 AE Mijdrecht  
Phone 02972-82461 FAX 02972-83936

**Spanish Branch (Barcelona)**

Sucursal en españa  
Polígono Industrial "Can Magí", Calle Joan Bucallà 2-4,  
Apartado de Correos 420, 08190 Sant Cugat del Vallès,  
Barcelona, Spain  
Phone 93.5653154 FAX 93.5894388

Manufactured by Mitsubishi Electric Corporation  
1 Zusho Baba, Nagaokakyo-City, Kyoto Japan



871C594A30

Made from recycled paper  
PRINTED IN MALAYSIA